

ADVANTE

USER MANUAL





The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.

Installation Instructions

A. Technical Parameters


Product name	ADVANTE
Product code	614
Input Voltage	AC 220V
Power	50-280W
Power Factor	>0.9
Beam Angle	30°, 60°, 90°, 45°(Asy), 40x130°, 60x130°
Color temperature	SINGLE COLOR
Colour rendering index	>80 CRI
Working Environment	-40°C to +55°C
Dimensions	252.6x337x55,2mm,320.3x462.6x84.6mm, 385.4x487.6x93.4mm
Net weight	2.16 - 6.33 Kg
Control Mode	On/Off, 1-10V

Wiring connections

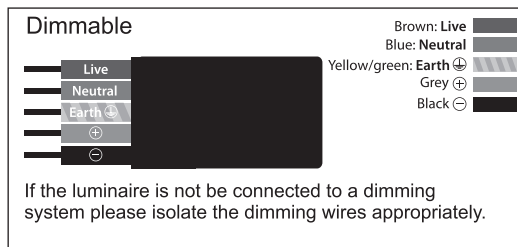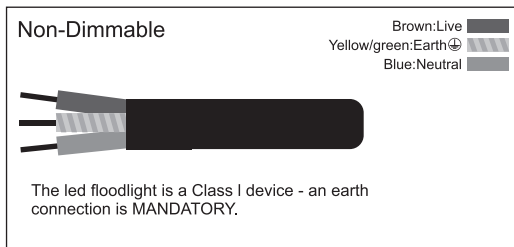

Installation Instructions

Hole dimension

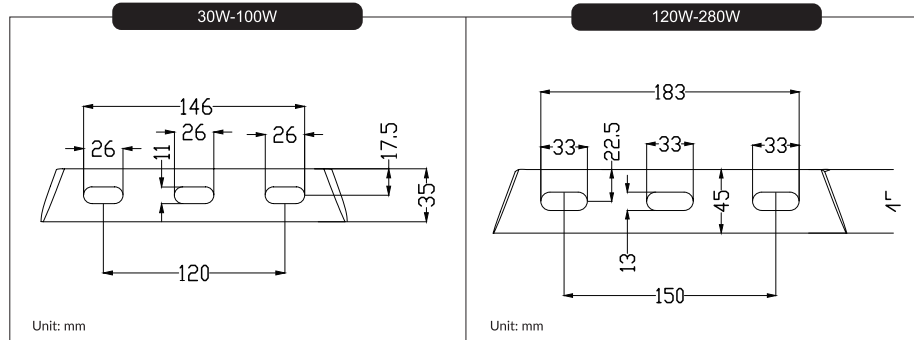

Adjustable Bracket Mounting

<p>1.</p>	<p>2.</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Expansion screws</p> </div> <div style="text-align: center;"> <p>Outer six angle screw</p> </div> </div> <p>Please use M12 screws for installation. If install causticity area please adopt 316 stainless steel screws.</p>
-----------	--

Adjustable bracket

<p>1.</p> <p>Drill holes in the ceiling, and install the expansion screws.</p>	<p>2.</p>	<p>3.</p>
<p>1. Please consider the wall, steel framed structure can bear the floodlight weight before installation, and the effects of wind resistance in the sky.</p>		